HOME
DECORATORS
COLLECTION

BF-25232 AUSTELL LINEN CABINET 60″Hx20″Wx14″D

INV#19395

ASSEMBLY INSTRUCTIONS

Made In China

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D UP ACROSS PANEL-1PC	E  DOWN ACROSS PANEL-1PC	F BOTTOM PANEL-1PC
G 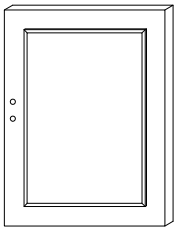 DOOR-1PC	H  FRONT PANEL-1PC	I  SHELVES-3PCS
J  BACK PANEL-1PC	K 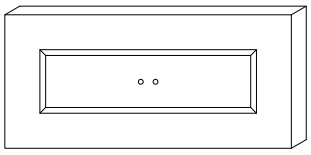 DRAWER PANEL FRONT-1PC	L 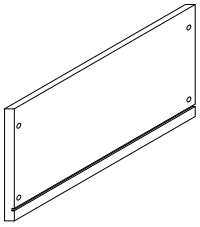 LEFT DRAWER PANEL SIDE-1PC

M 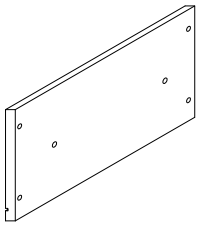 RIGHT DRAWER PANEL SIDE-1PC	N 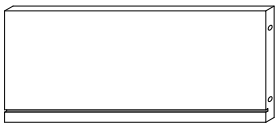 DRAWER PANEL BACK-1PC	O  DRAWER PANEL BOTTOM-1PC
P CAM-TOOL-1PC	Q 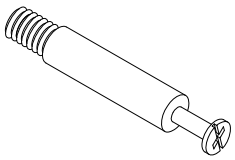 CAM-BOLTS-19PCS	R 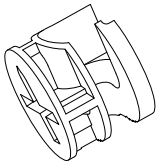 CAM-LOCKS-19PCS
S  DOWELS-2PCS	T 7mm × 5/8"  SCREWS-26PCS	U HANDLES-2PCS
V 8mm × 5/8"  SCREWS-4PCS	W 6mm × 1"  SCREWS-8PCS	X 6mm × 1/2" SCREWS-22PCS
Y 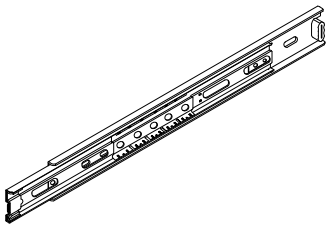 OUTER SLIDES-2PCS	Z 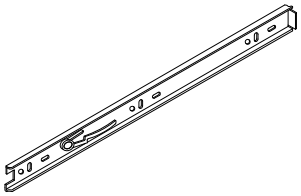 INNER SLIDES-2PCS	A1  MAGNET-1PC
B1  SHELF SUPPORTS-12PCS	C1  HOOKS-4PCS	D1 6mm × 3/4"  SCREWS-4PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

E1  GECKOS-4PCS	F1 7mm × 7/8"  SCREWS-4PCS	G1 PLASTIC BELTS-2PCS
H1  HINGES-2PCS	I1 5mm × 1/2" SCREW-1PC	J1 FEMALE MAGNET-1PC

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

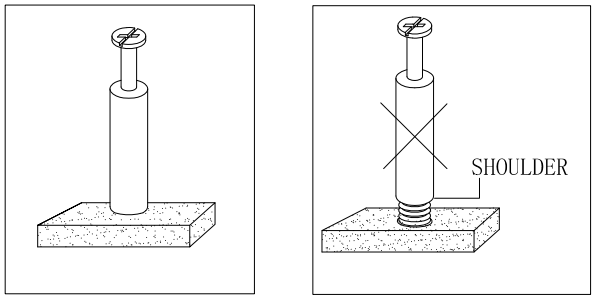

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

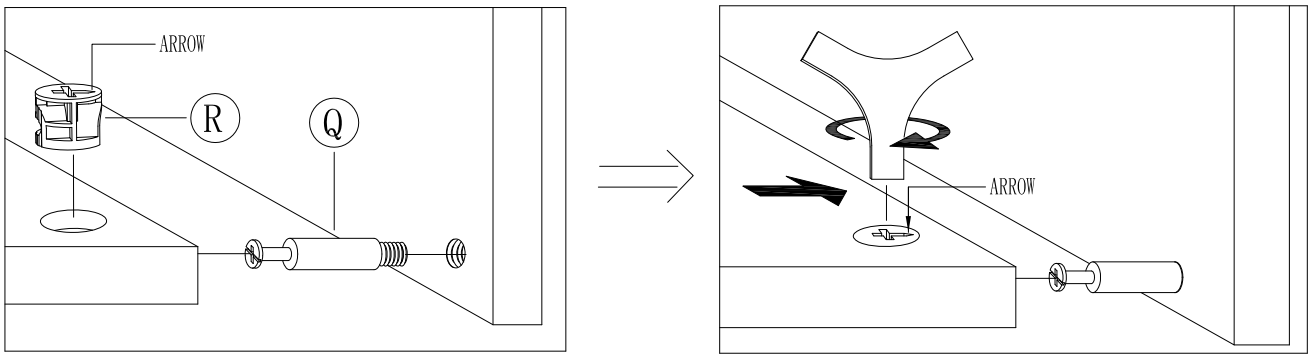

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

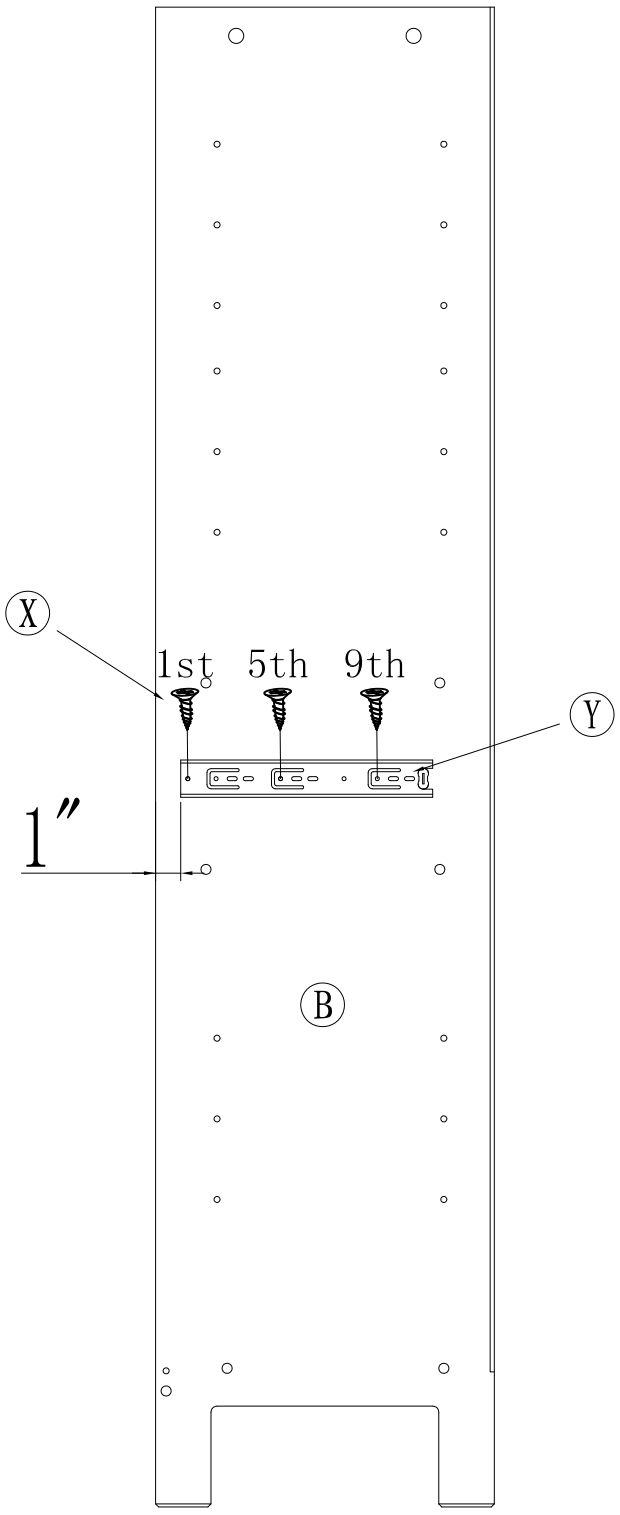

1). ASSEMBLE THE OUTER SLIDE(Y).

- ATTACH THE OUTER SLIDE(Y) TO LEFT SIDE PANEL(B) USING 3 SCREWS(X).

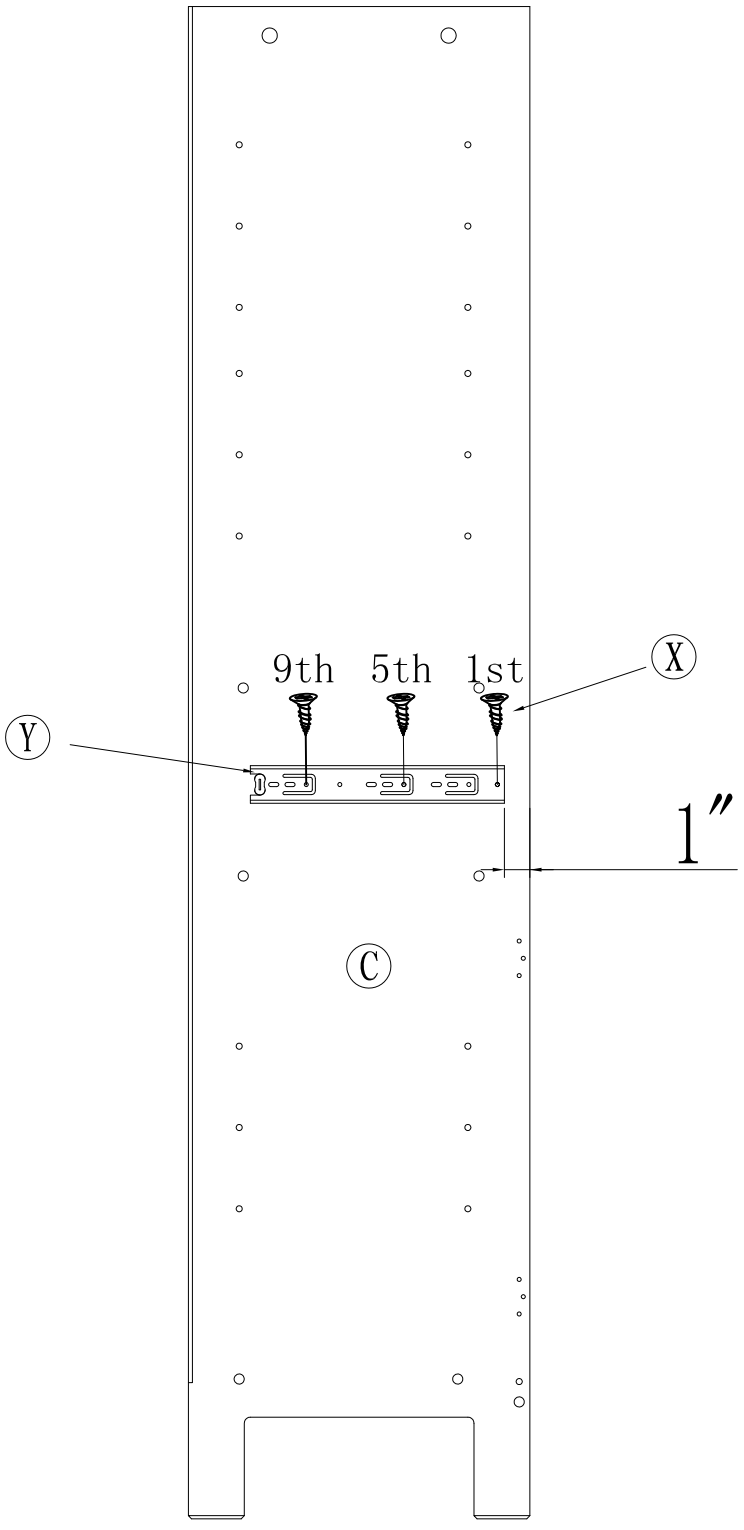

2). ASSEMBLE THE OUTER SLIDE(Y).

● ATTACH THE OUTER SLIDE(Y) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(X).

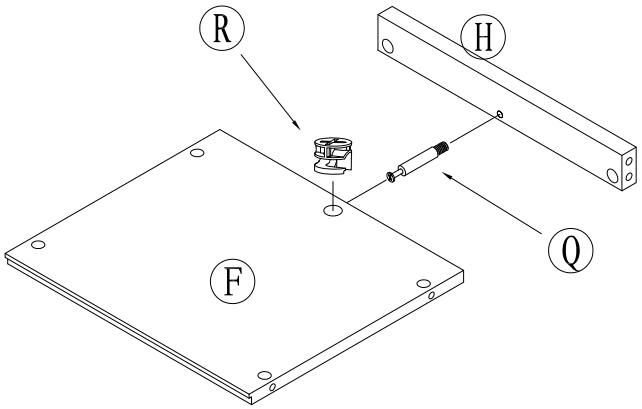

3). ASSEMBLE THE FRONT PANEL(H).

- ROTATE 1 CAM-BOLT(Q) INTO THE HOLE IN THE FRONT PANEL(H).
- PLACE CAM-BOLT(Q) INTO THE HOLE IN THE BOTTOM PANEL(F) AND ATTACH USING 1 CAM-LOCK(R).

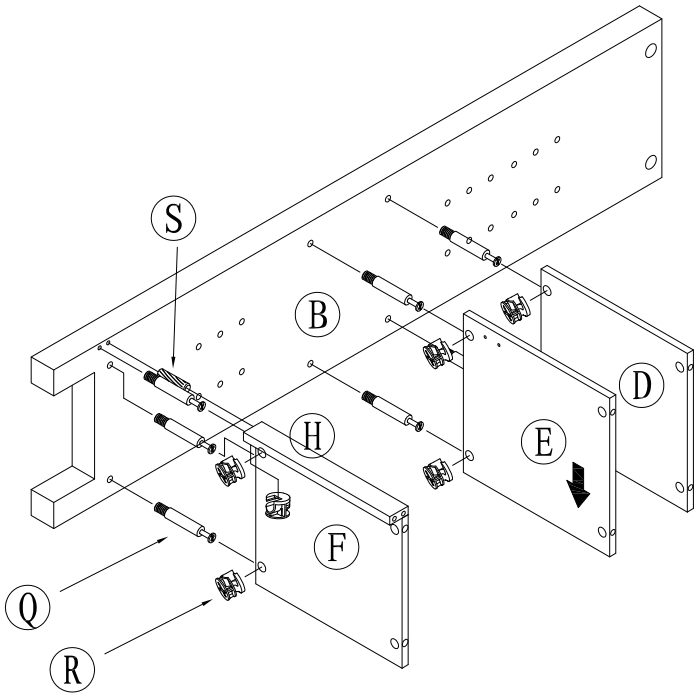

4). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 7 CAM-BOLTS(Q) AND INSERT 1 DOWEL(S) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(D/E/F/H) AND ATTACH USING 7 CAM-LOCKS(R).

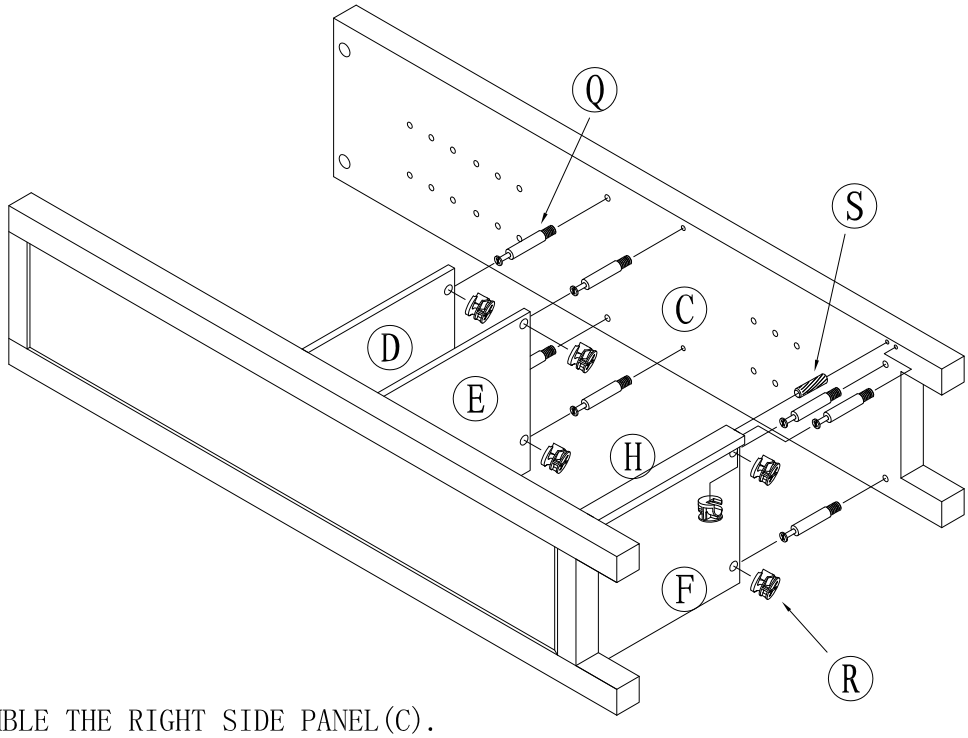

5). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 7 CAM-BOLTS(Q) AND INSERT 1 DOWEL(S) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(D/E/F/H) AND ATTACH USING 7 CAM-LOCK(R).

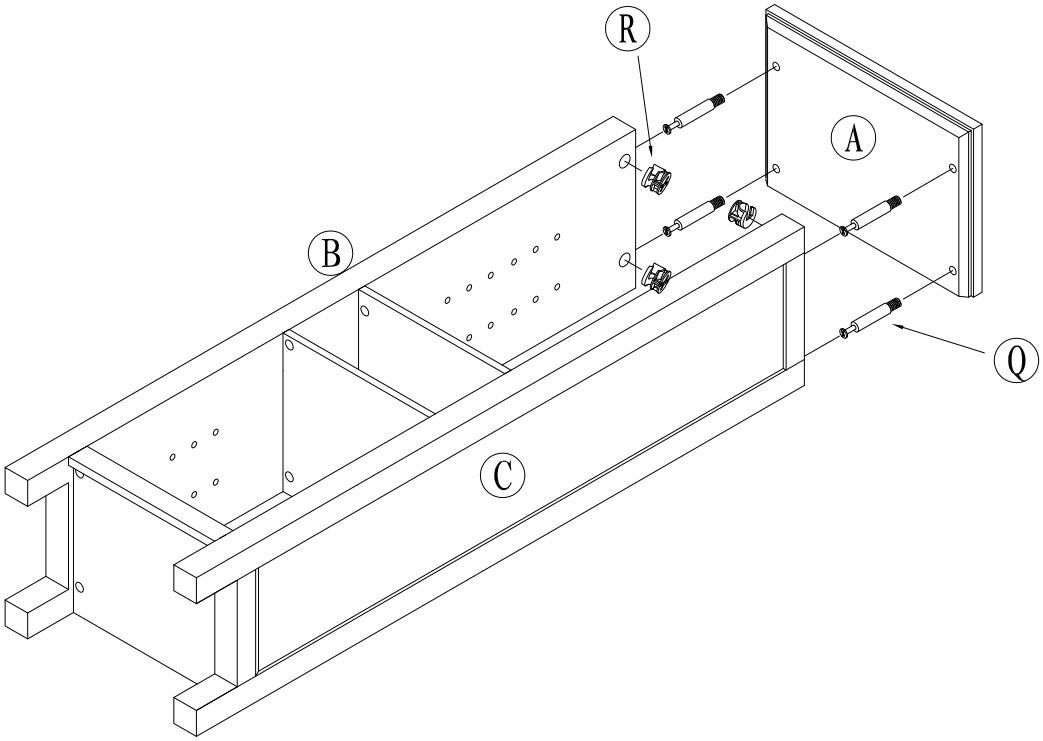

6). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCK(R).

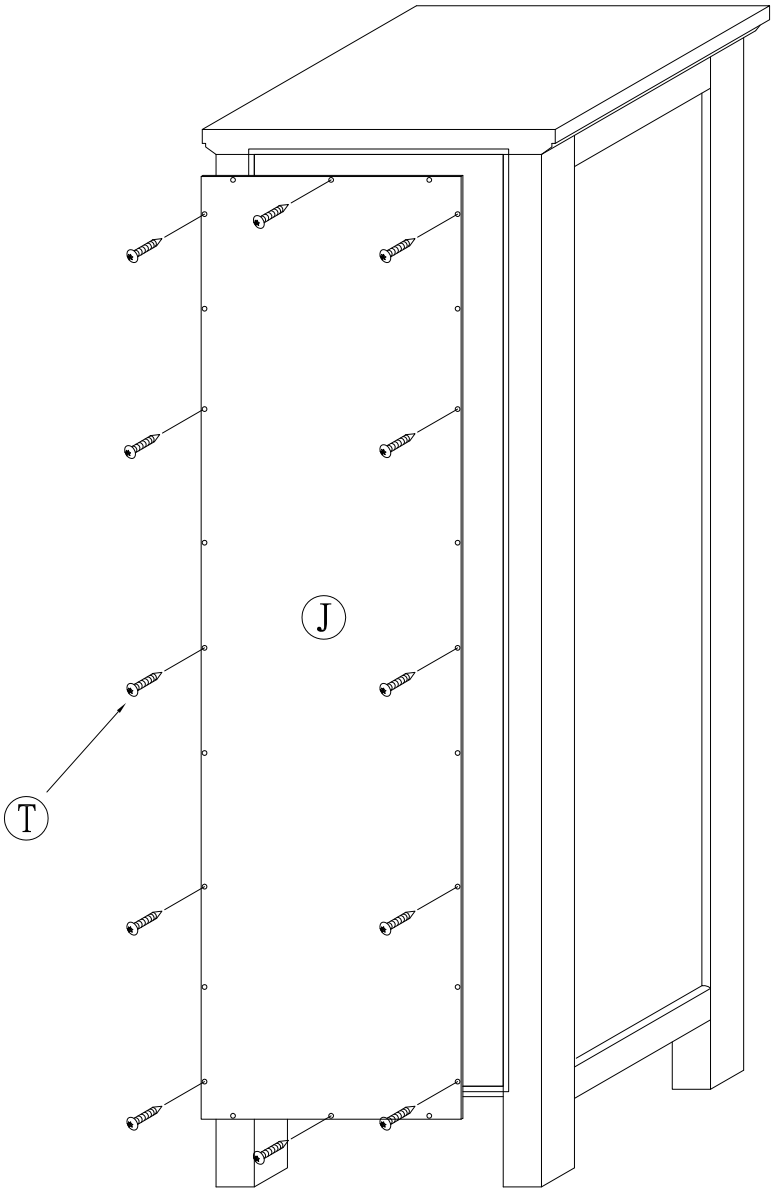

7). ASSEMBLE THE BACK PANEL(J).

- ATTACH THE BACK PANEL(J) USING 24 SCREWS(T).

Warning

The anti-tip hardware must be used as part of assembly!

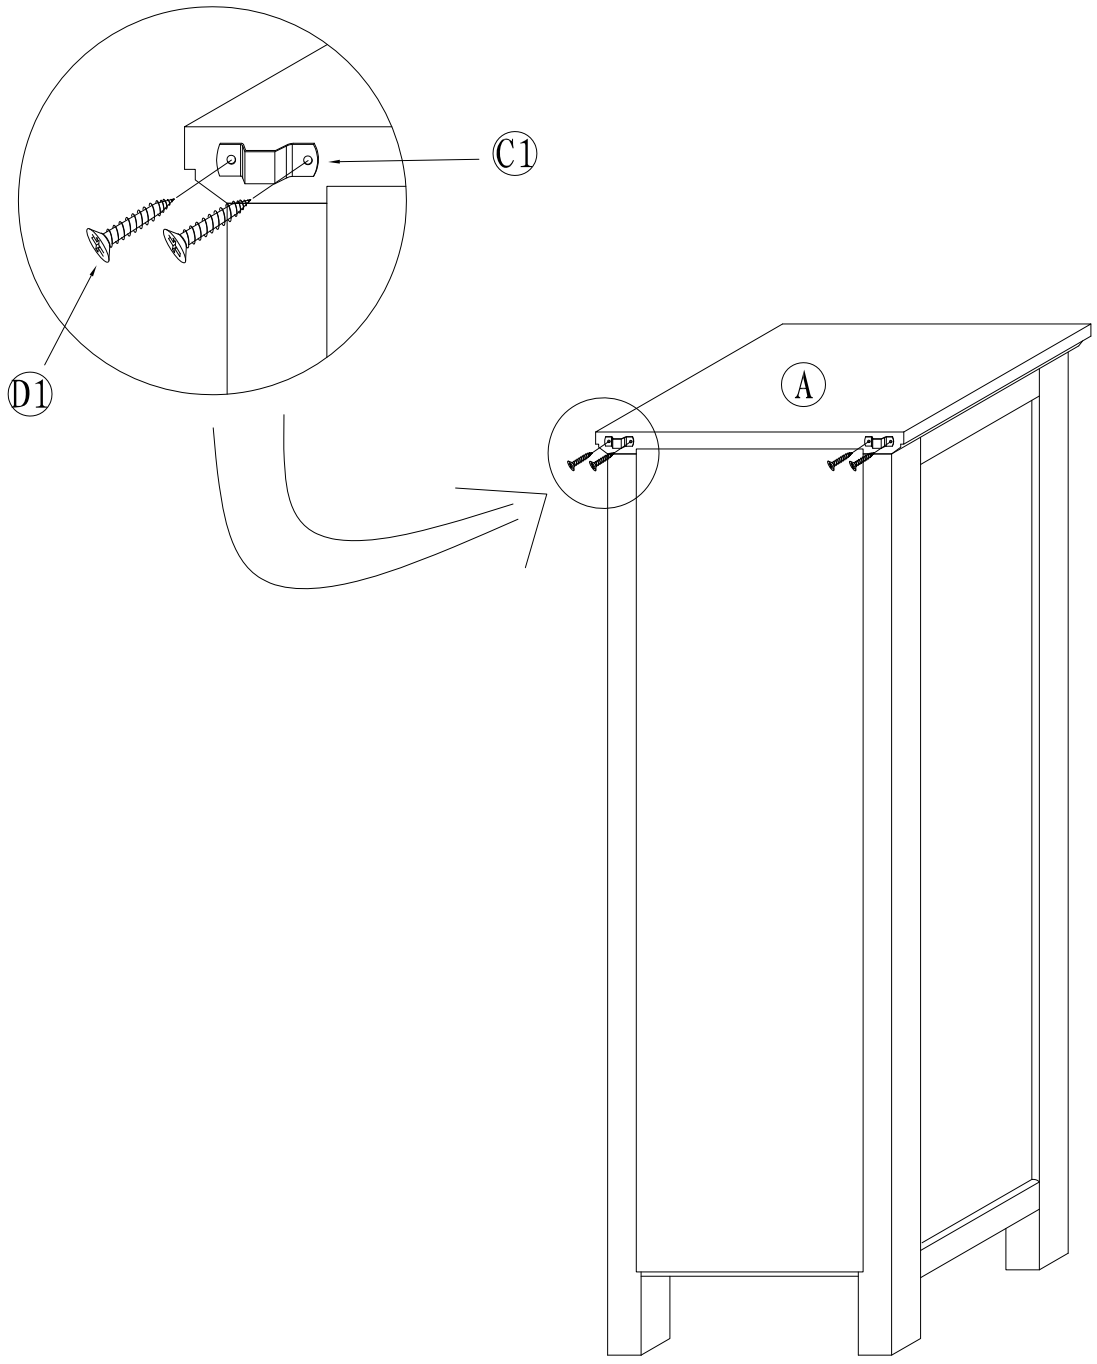

8). ASSEMBLE THE HOOKS(C1).

- ATTACH 2 HOOKS(C1) TO TOP PANEL(A) USING 4 SCREWS(D1).

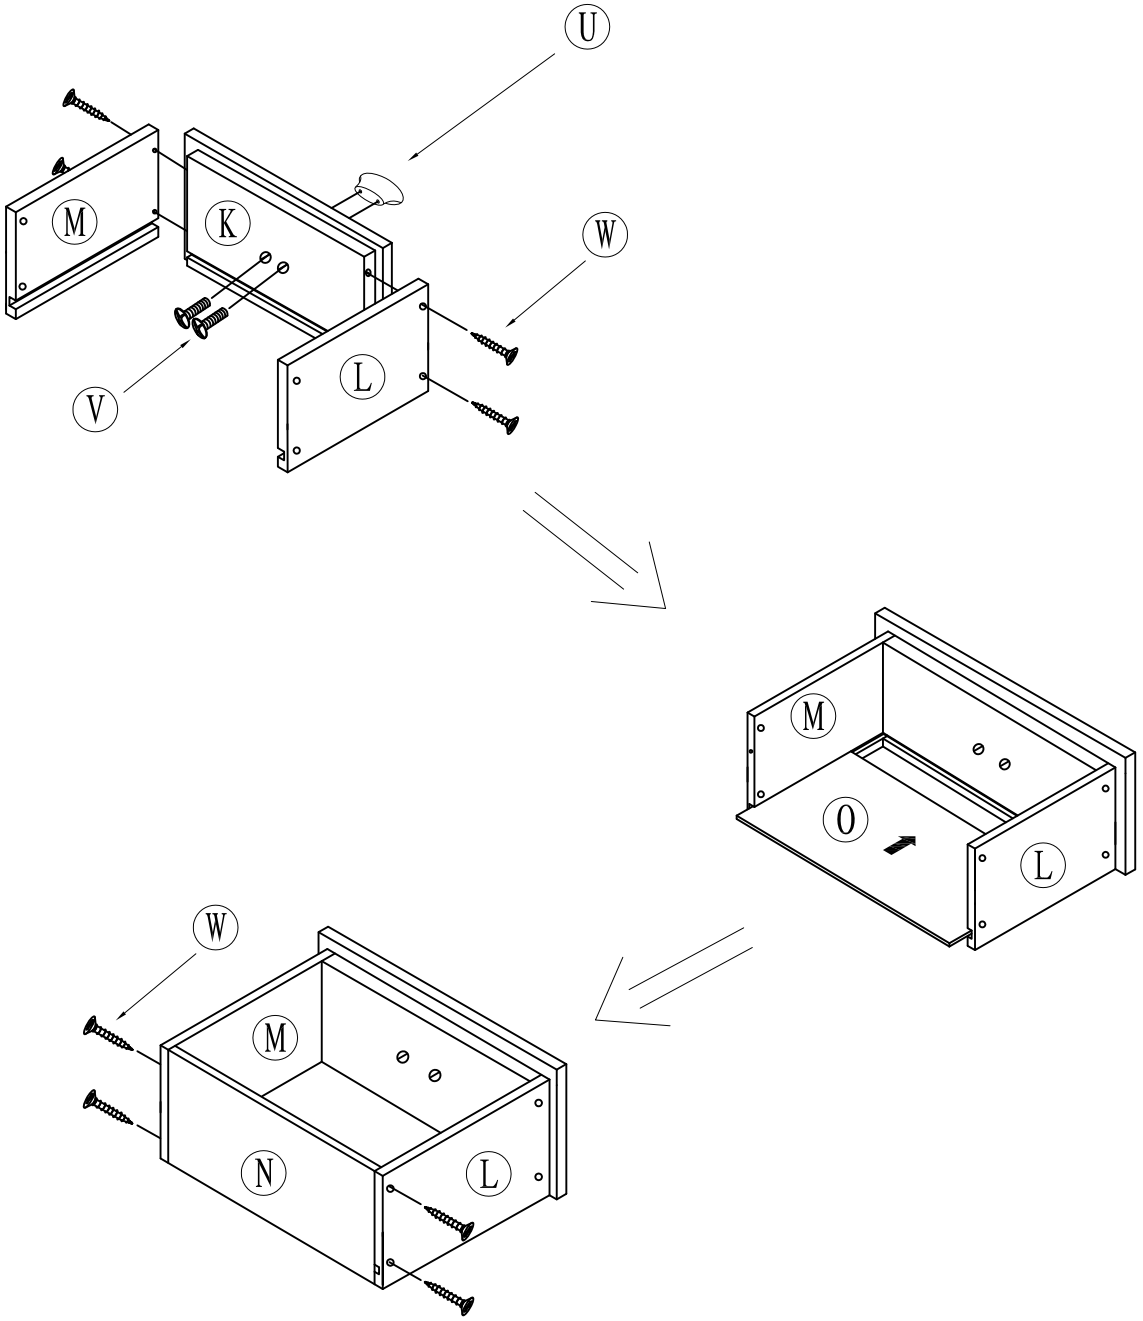

9). ASSEMBLE THE DRAWER.

- ATTACH THE DRAWER PANEL SIDE(L/M) TO DRAWER PANEL FRONT (K) USING 4 SCREWS(W).
- ATTACH THE HANDLE(U) TO DRAWER PANEL FRONT(K) USING 2 SCREW(V).
- INSERT DRAWER PANEL BOTTOM(O) INTO THE SLOT IN THE DRAWER PANEL SIDE(L/M).
- ATTACH THE DRAWER PANEL BLACK(N) TO DRAWER PANEL SIDE(L/M) USING 4 SCREWS(W).

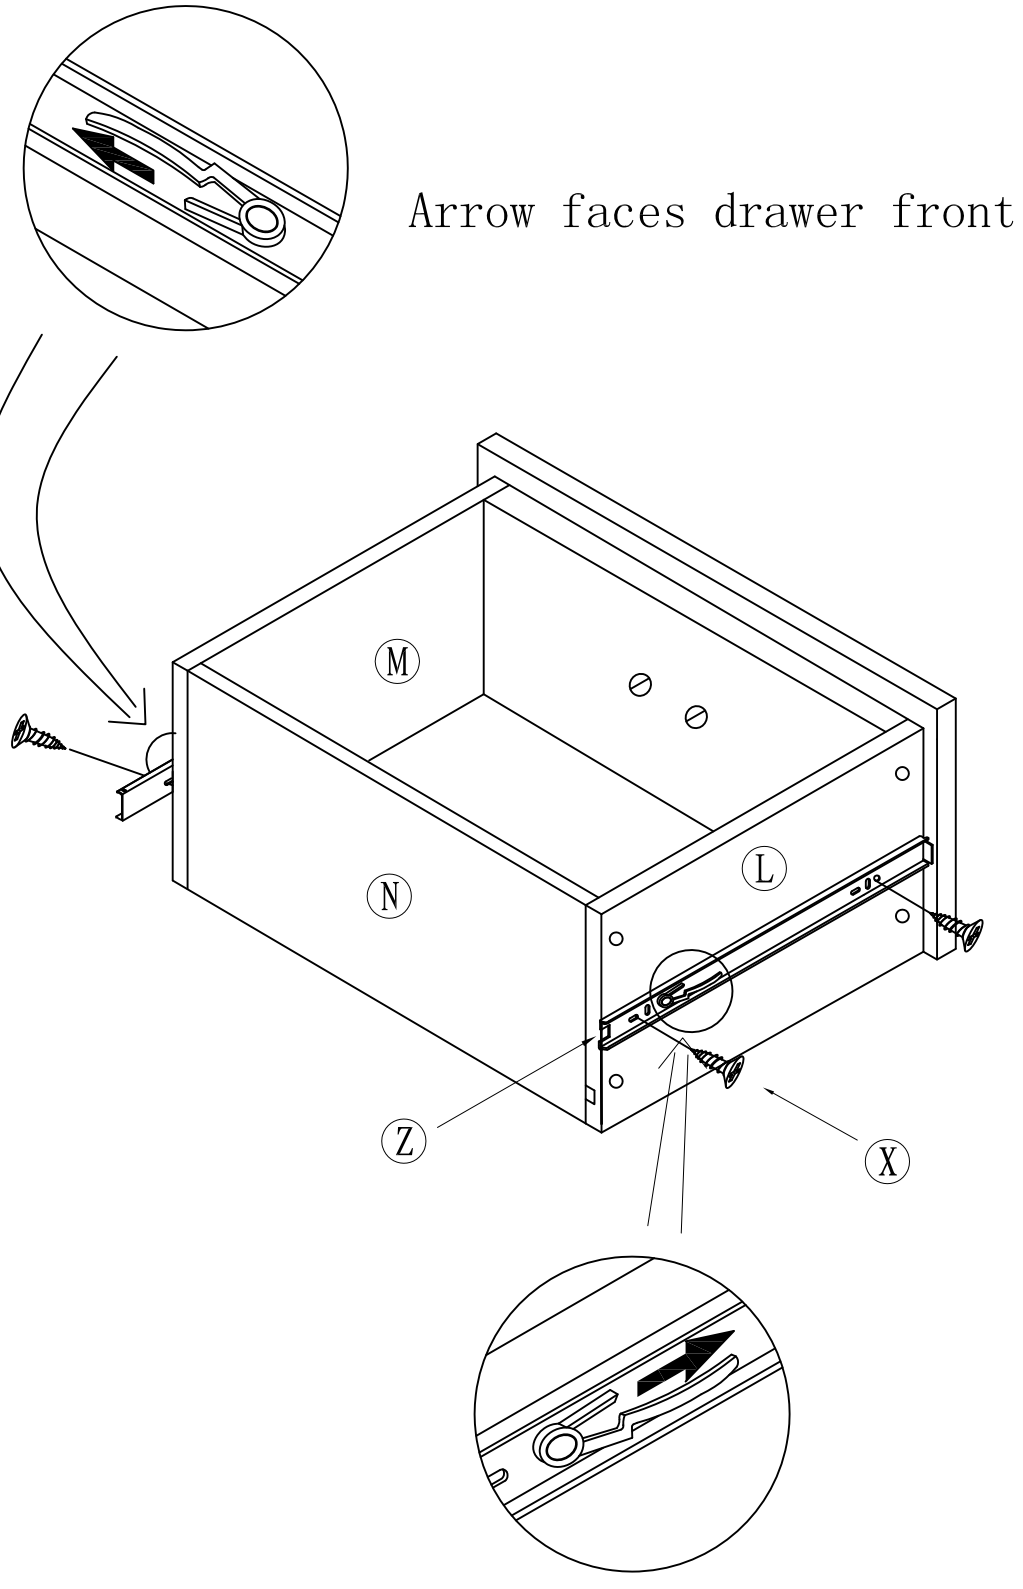

10). ASSEMBLE THE INNER SLIDES(Z).

- ATTACH THE INNER SLIDES(Z) TO PANEL(L/M) USING 4 SCREWS(X).

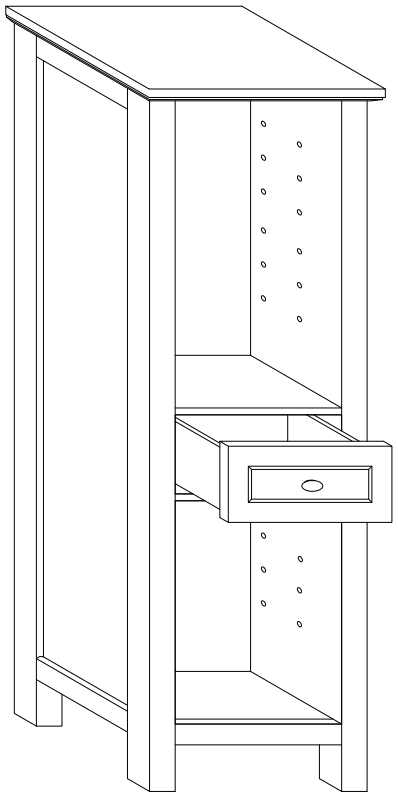

11). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDERS.

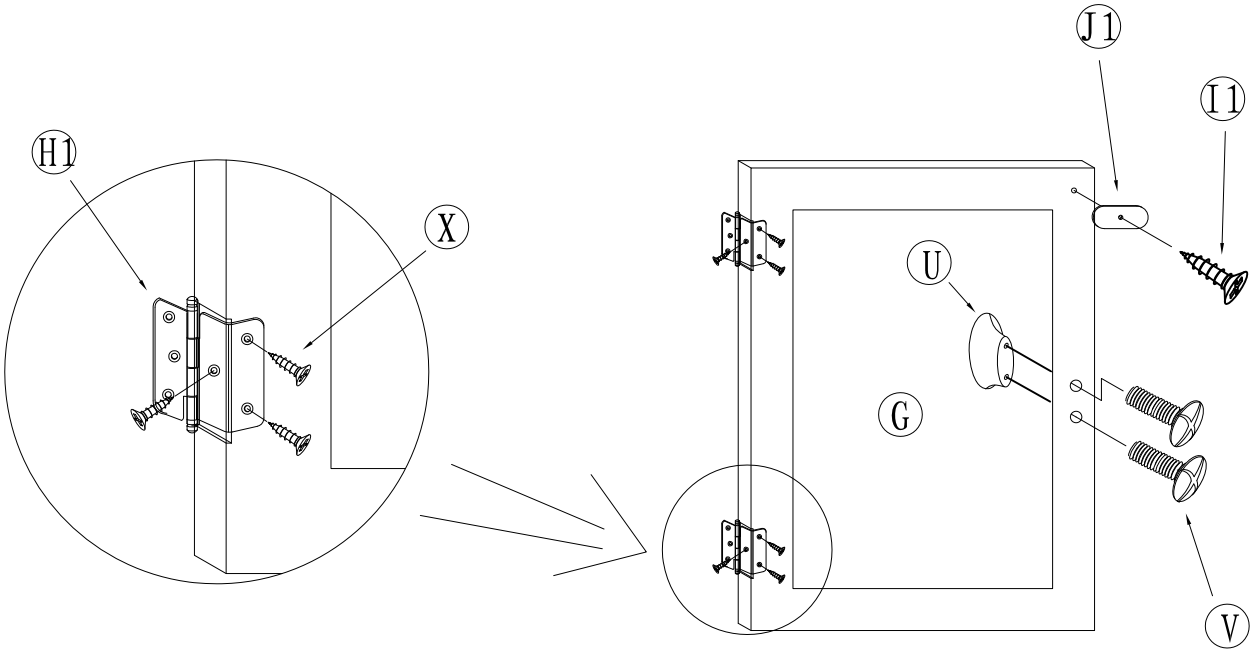

12). ASSEMBLE THE DOOR(G).

- ATTACH 1 HANDLES(U) TO DOOR(G) USING 2 SCREWS(V).
- ATTACH FEMALE MAGNET(J1) TO DOOR(G) USING 1 SCREW(I1).
- ATTACH 2 HINGES(H1) TO DOOR(G) USING 6 SCREWS(X).

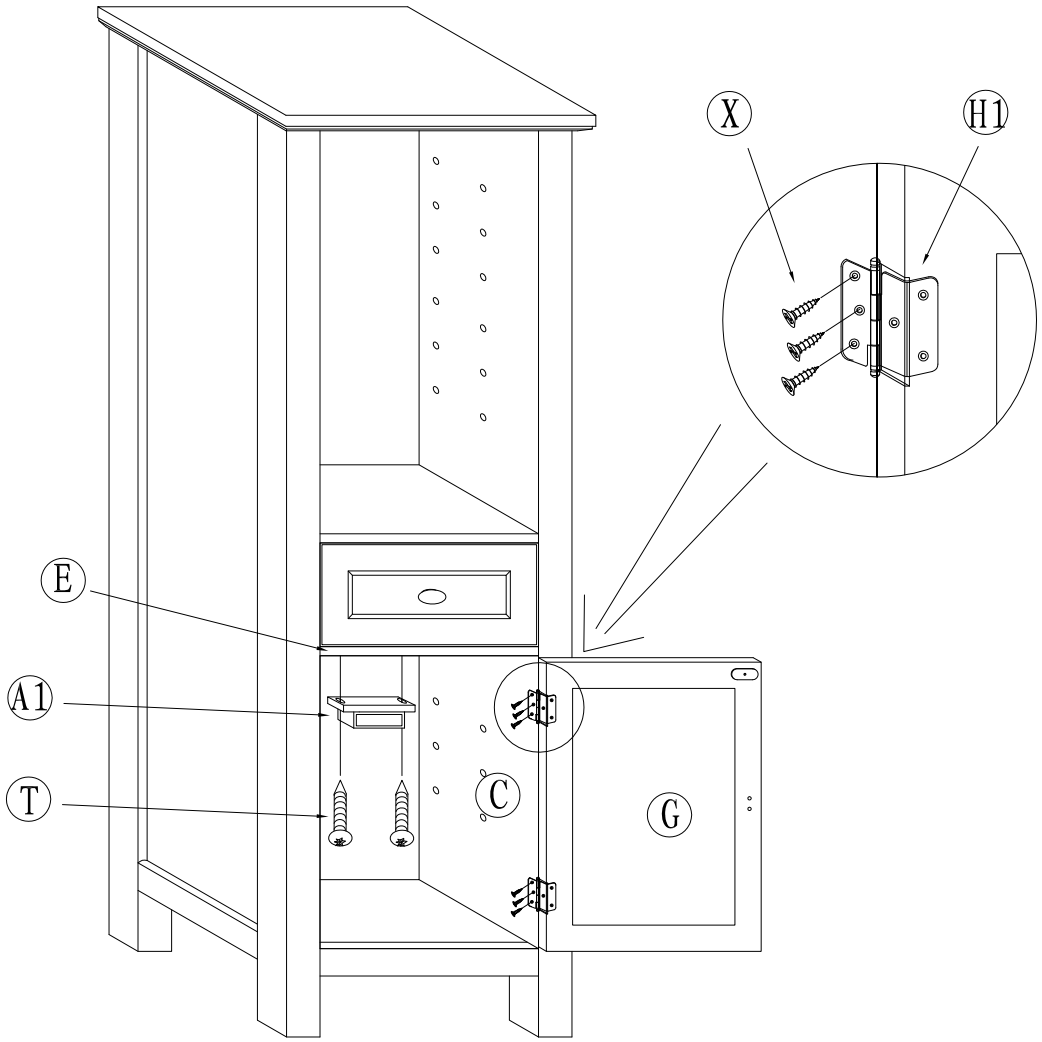

13). ASSEMBLE THE DOOR(G).

- ATTACH THE DOOR(G) TO RIGHT SIDE PANEL(C) USING 6 SCREWS(X).
- ATTACH THE MAGNET(A1) TO DOWN ACROSS PANEL(E) USING 2 SCREWS(T).

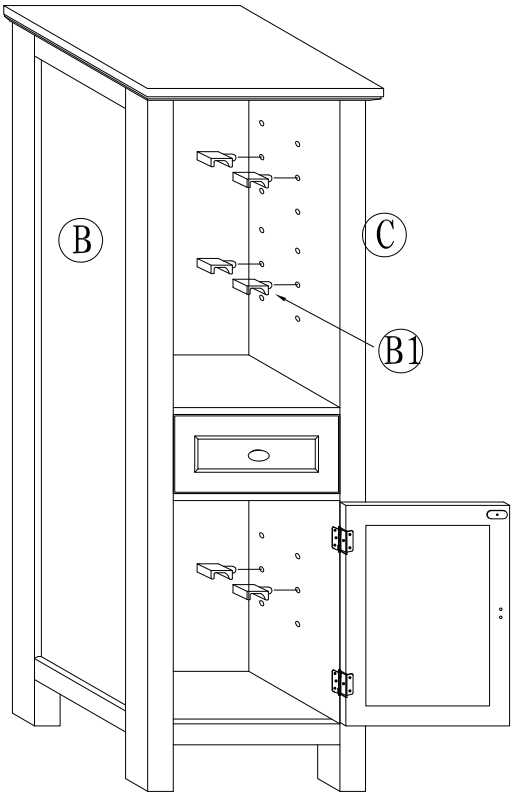

14). ASSEMBLE THE SHELF SUPPORTS(B1).

- INSERT 12 SHELF SUPPORTS(B1) INTO THE HOLES IN THE SIDE PANEL(B/C).

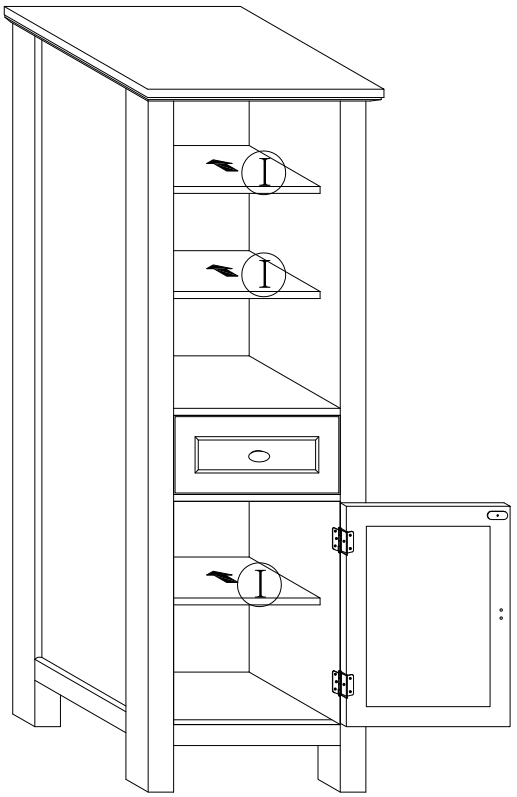

15). ASSEMBLE THE SHELVES(I).

- PUT THE SHELVES(I) ONTO THE SHELF SUPPORTS(B1).

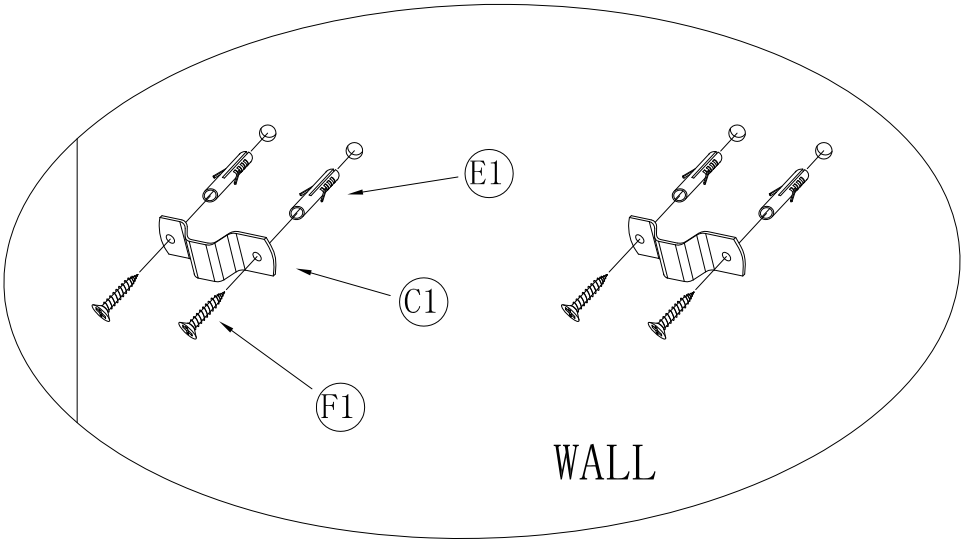

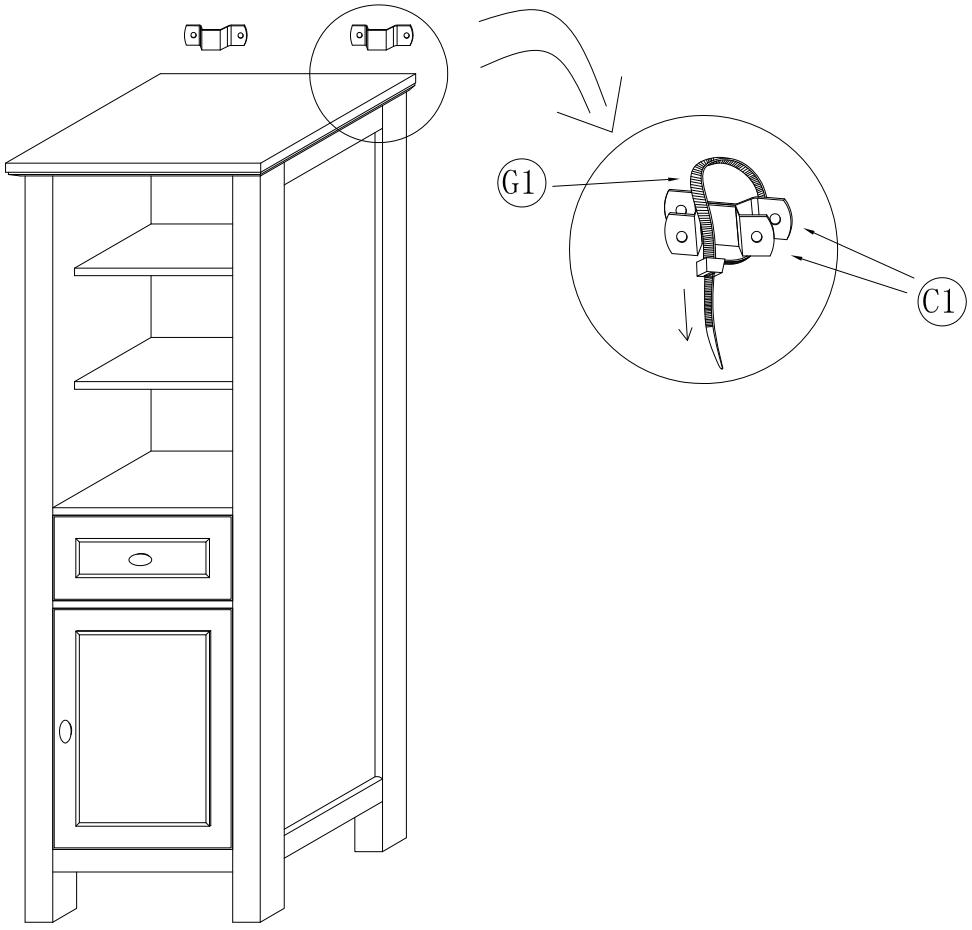

16). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 GECKOS(E1) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(F1) INTO THE GECKOS(E1).
- CONNECT THE TWO HOOKS(C1) WITH A PLASTIC BELT(G1).